



JNP-1000
JNP-1800
JNP-1803

For household use

Rice Cooker/Warmer

OPERATING INSTRUCTIONS

 
Thank you for purchasing this TIGER rice cooker/warmer.
Please read these instructions carefully before use and observe them during use.

家庭用

炊飯電子鍋

使用說明書

感謝您購買TIGER（虎牌）炊飯電子鍋。
使用前請務必仔細閱讀本操作說明的全部內容。

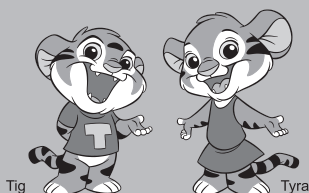

©2003 TIGER CORPORATION

IMPORTANT SAFEGUARDS

When using the appliance, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord or plug in water or other liquid.
4. Close supervision is necessary when the appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate the appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving the appliance containing hot oil or other hot liquids.
12. Always attach plug to the appliance first, then plug cord into the wall outlet.
To disconnect, turn any control to "off", then remove plug from wall outlet.
13. Do not use the appliance for other than intended use.
14. Risk of electric shock, cook only in removable container.

SAVE THESE INSTRUCTIONS

Servicing should be performed by an authorized service representative.
This appliance is intended for household use.

1. A short power cord (or detachable power cord) is provided to reduce the risks of becoming entangled in or tripping over a longer cord.
2. Longer detachable power cords or extension cords are available and may be used if care is exercised in their use.
3. If a longer detachable power cord or extension cord is used:
 - a. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
 - b. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled by children or tripped over unintentionally.

The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

The following instructions are applicable to 120V only:

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet in only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

Contents

1	Important Safeguards	4
2	Names and Functions of Component Parts	8
3	How to Cook Rice	9
4	How to USE (Porridge Cooking)	11
5	How to USE (Steaming)	12
6	For Keeping Cooked Rice Warm And Tasty	13
7	Cleaning and Maintenance	14
	Specifications	16

1 Important Safeguards

Read and follow all safety instructions before using the rice cooker.

- The WARNINGS and CAUTIONS described below are intended to protect the user and other individuals from physical harm and household damage. To ensure safety, please follow carefully.
- Do not remove the caution/warning seal attached to the appliance.

Safety instructions are classified and described according to the level of harm and damage caused by improper use, as shown below.

Warning

This symbol indicates there is a possibility of death or serious injury^{*1} when the unit is improperly handled.

Caution

This symbol indicates there is a possibility of injury^{*2} or damage to property^{*3} when the unit is improperly handled.


*1 "Seriously injury" is defined here as loss of sight, burns (high and low temperature), electric shock, broken bones, poisoning, or other injuries severe enough to require hospitalization or extended outpatient care.

*2 "Minor or moderate injury" is defined here as a physical injury, burn, or electric shock which will not require hospital stay or extended outpatient care.


*3 "Damage to property" is defined here as damage towards a building, furniture, or pets.

Description of Symbols




The  symbol indicates a warning or caution. The specific details of the warning or caution are indicated inside the symbol or in an illustration or text near the symbol.



The  symbol indicates a prohibited action. The specific details of the prohibited action are indicated inside the symbol or in an illustration or text near the symbol.



The  symbol indicates an action that must be taken or an instruction that must be followed. The specific details of the action or instruction are indicated inside the symbol or in an illustration or text near the symbol.

Warning

General safety precautions



Disassembly is prohibited

Do not attempt to disassemble, repair, or modify the product. Repairs should only be performed by a qualified service representative.

Doing so may result in fire, electric shock, or injury.



Stop using the appliance immediately if you incur any malfunction or trouble.

Not doing so may result in fire, electric shock, or injury.

Examples of trouble:

- The power cord and/or plug become abnormally hot.
- Smoke is emitted from the rice cooker or a burning odor is detected.
- The rice cooker is cracked or there are loose or rattling parts.
- The inner pot is deformed.
- There are other problems or abnormalities.

Immediately unplug the power cord from the outlet and contact the place of purchase for servicing.

Warning

Environment for use



Do not use the rice cooker on a sliding tabletop that can not easily bear its weight.

Falling from the tabletop may result in injury, burns, or malfunction of the unit itself.

Before using the rice cooker, confirm that the sliding tabletop is sufficiently able to bear its weight.

Who should use the rice cooker



This appliance is not intended for use by persons with physical difficulties or lack of experience and knowledge—unless they have been given supervision or instruction concerning to the use of the appliance by a person responsible for his/her safety. Unsupervised use may result in burn, electric shock, or injury.



Do not allow children to use the appliance by themselves and do not put within reach of infants or toddlers.

Failing to do so may result in burns, electric shock, or injury.

Using the rice cooker



Do not use this product in anyway not described in the operating instructions.

Steam or contents may spray out causing burns or other injuries.

(Examples)

- Heating ingredients inside of plastic cooking bags, etc.
- Using parchment paper to cover food in the rice cooker.

Power supply



Use only rated voltage power.

Use of any other power source may result in fire or electric shock.



Use an electrical outlet rated 7A or higher and do not plug in other devices at the same time.

Connecting other devices in the same outlet may cause the outlet to overheat or result in fire.

Power cord and plug



Do not damage or use a damaged power cord. Do not forcefully bend, twist, fold, or modify the cord.

Do not place near high temperature surfaces or under/between heavy objects. A damaged power cord can cause fire or electric shock.



Wipe the plug thoroughly in the case dust or other foreign objects are collected.

This is to avoid fire.



Firmly insert the plug into the outlet to avoid electric shock, shorting, smoke, or fire.



Do not use the product if the power cord or plug is damaged or the plug is loose in the outlet.

This is to avoid electric shock shorting, or fire.



If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



Do not plug in or unplug with wet hands.

This is to avoid electric shock or injury.

Do not touch the unit with wet hands



Do not expose the plug to steam.

Doing so may result in electric shock or fire. When using the product on a sliding table, be careful not to expose the product to steam.

Warning

Handling the rice cooker



Never immerse the unit in water or other liquid

Do not immerse the appliance in water, or pour water into the appliance; this is to avoid short circuits, electric shocks, and malfunctions.



Do not insert any metal objects into any gaps between the parts. Doing so may result in electric shock or malfunction.

During and after cooking



Never open the lid during cooking. Doing so may result in burns.



Do not place your face or hands near the steam cap or steam vent. Doing so may result in burns. Be especially careful to keep out of reach of infants and children.

Caution

General safety precautions



Handle the rice cooker with care. Dropping the rice cooker or exposing it to a strong impact may result in injury or malfunction of the unit itself.



Household use only. This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

Environment for use



Do not use on an unstable surface, or on a table or rug that is vulnerable to heat. Doing so may result in fire or damage to the table or mat.



Do not use near the wall or furniture. Steam and heat may cause damage, discoloration and/or deformation. Use the rice cooker at least 30cm away from walls or furniture.



Do not use the rice cooker near a heat source or where it may be splashed with water. Doing so may result in electric shock, short-circuiting, fire, or deformation or malfunction of the rice cooker.

 


Do not use the rice cooker on an IH cooking heater. Doing so may result in malfunction.

Power cord and plug



Be sure to firmly hold the plug when removing from an outlet; this is to avoid electric shock, shorting, or fire.

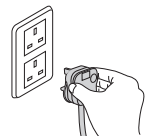

Do not use multiple outlet receptacles; this is to avoid fire.



Handling the rice cooker



Use only the inner pot made exclusively for this rice cooker. Using any other pot may result in overheating or malfunction.



Do not cook with the inner pot empty. Doing so may result in overheating or malfunction.

Caution



Be careful of the escaping steam when opening the lid. Exposure to steam may result in burns.



Unplug the power cord

Unplug power cord when not in use. This is to avoid injury, scalds, electric shock, or fire caused by a short-circuit.



Do not touch

Do not touch the hook button while carrying the rice cooker. Doing so may cause the lid to open, resulting in injury or burns.

During and after cooking



Do not touch

Do not touch hot parts during or immediately after cooking. Doing so may result in burns.

Following these safety instructions will allow the appliance to be used for many years.

- Remove any burnt rice or remaining grains of rice. Failure to do so may cause steam to leak or contents to boil over. This may result in malfunction or improperly cooked rice.
- Do not cover the rice cooker with a cloth or other object during cooking. Doing so may cause the rice cooker or the lid to become deformed or discolored.
- The holes on the rice cooker are designed to maintain its functions and performance. In extremely rare cases, dust or even insects may enter these holes and cause malfunction. To prevent this, a commercially available insect prevention sheet, etc., is recommended. If a malfunction does occur due to this problem, it will not be covered by warranty. Contact the place of purchase.
- The inner pot's fluorocarbon resin coating may wear and peel with extended use. This material is harmless to humans and this situation presents no hindrance to actual cooking or to the rice cooker's heat insulating capability. In the case you would like to purchase a new inner pot, you can do so by contacting the place of purchase.



Do not move the rice cooker while it is still cooking. Doing so may cause the contents to spill and cause burns.

Cleaning the rice cooker



 
Wait until the appliance has cooled down before performing maintenance; this is to avoid burns from hot surfaces. Failure to do so may result in burns.



Do not wash the entire appliance. Do not pour water into the appliance or into the base of the appliance; this is to avoid short circuits and electric shocks.

- Strictly observe the following instructions to keep the fluorocarbon resin coating from scratching or peeling.
 - Do not place the inner pot directly over gas, electric, or IH stove top. Do not place in the microwave or oven.
 - Use the Keep Warm function for white rice only. Do not use for mixed or seasoned rice, etc.
 - Do not use vinegar inside the inner pot.
 - Use only the supplied spatula or a wooden spatula.
 - Do not use hard utensils such as metal ladles, spoons, or whisks.
 - Do not place a basket inside the inner pot.
 - Do not place tableware and other hard utensils or objects inside the inner pot.
 - Do not clean the inner pot with hard materials such as metal spatulas or nylon scouring sponges.
 - Do not use a dishwasher/dryer to clean the inner pot.
 - Wash the rice in a separate bowl. Using the inner pot for washing rice may damage the fluorocarbon resin coating or deform the bottom side of the inner pot, resulting in improperly cooked rice.
 - If the inner pot becomes deformed, contact the place of purchase.

2 Names and Functions of Component Parts

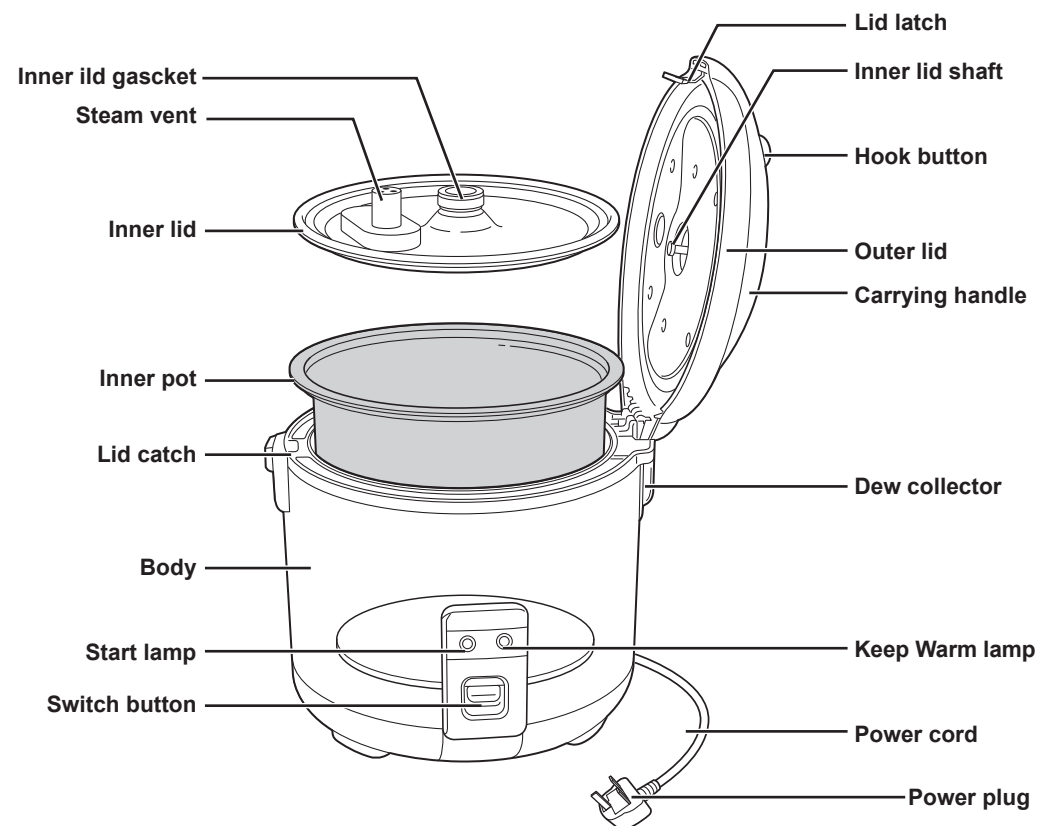

Accessories

Measuring cup
About 1 cup (0.18 L), about 150 g



Spatula

 


Spatula holder



Only included with the JNP-1803 model

Steaming plate



Ladle



Porridge pot



3 How to Cook Rice

1 Measure the rice.

Always use the measuring cup supplied with the rice cooker.
A level filling of rice in the supplied measuring cup equals about 0.18 L.

 


- Fill the measuring cup as shown below.

Correct measurement



Incorrect measurement

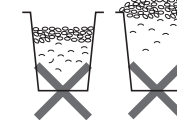

2 Wash the rice.



 
Note

- Wash the rice in a separate bowl. Using the inner pot for washing rice may damage the fluorocarbon resin coating or deform the bottom side of the inner pot, resulting in improperly cooked rice.

3 Put the rice and water into the inner pot.

Place the inner pot on a level surface and adjust the water level to the appropriate line of the corresponding scale on the inside of the pot.

When cooking 3 cups of white rice, adjust the water level to line "3" of the scale.

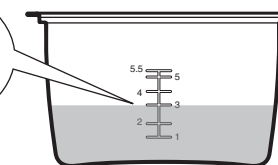


Note

- Inappropriate amount of water may cause the rice to boil over or result in improperly cooked rice.

4 Place the inner pot in the rice cooker.

 Turn the inner pot slightly from right to left to set the pot properly.

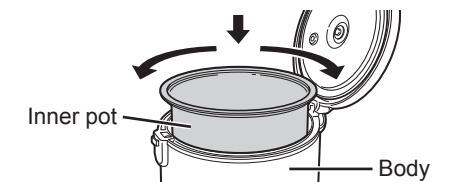


Caution

- If the outer surface of the inner pot is wet, this may cause a crackling sound during cooking. Moisture on the outer surface of the inner pot may also cause damage. Be sure to wipe any water completely before use.

5 Install the inner lid to the outer lid by pressing the inner lid over the inner lid shaft.

 After installing the inner lid, the smaller side of inner lid seal should face you with the outer lid open.

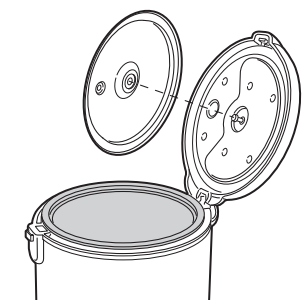


Note

- If the inner lid is inserted improperly, the outer lid will not close.

4 How to USE (Porridge Cooking)

6 Close the outer lid.

 
To close the outer lid, simply lower it until the lid latch engages with the lid catch with click.

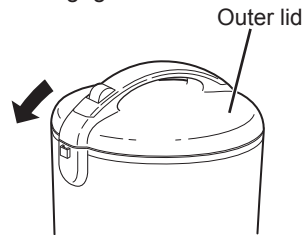

Note

- If the outer lid is not closed properly, the cooking efficiency will be badly affected.

 7 Connect the power plug to an outlet.

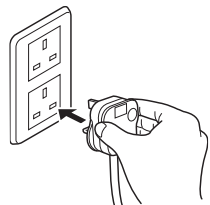


Note

- Do not plug the AC cord in until actual cooking starts. Anytime this rice cooker is plugged in and the switch is not immediately set for cooking, the warming circuit is operating.
- Unplug power cord when not in use.

8 Press the switch button.


Press the switch button on and a click will be heard.

 The start lamp will turn on indicating the rice is starting to cook.

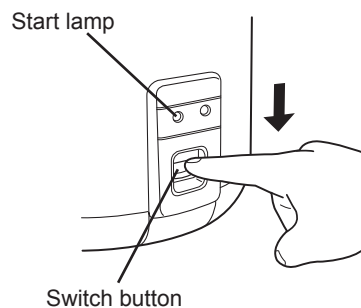

9 Steam the rice for 15 to 20 minutes.

 
When the switch button is turned off and the Keep Warm function engages, the actual cooking proceeds to steaming. Therefore, keep the lid closed for about 15 minutes.

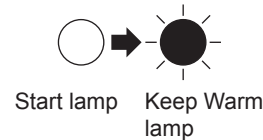

Note

- Do not press the switch button for cooking while the Keep Warm function is on.

 10 Stir and loosen the cooked rice.

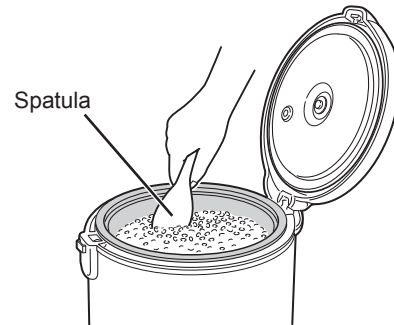

Note

 
- Do not forget to loosen the cooked rice with the spatula.

11 The Keep Warm function continues.

Note

- While serving, be careful to keep the flanged rim of the inner pot free of rice. Failure to do so may prevent the lid from closing properly and cause the Keep Warm function not to work properly.

12 Disconnect the power plug from the outlet.

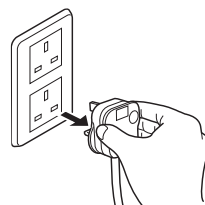

This function is only available for the JNP-1803.

1 Measure the rice.

 
Always use the measuring cup supplied with the rice cooker.

A level filling of rice in the supplied measuring cup equals about 0.18 L.


2 Wash the rice.



3 Put the desired amount of rice and water into the porridge pot.

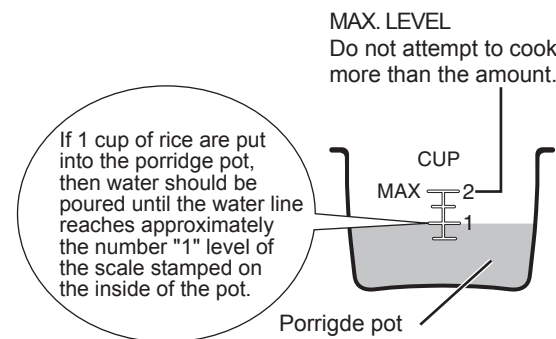

 4 Put 2 cups of water with the measuring cup accessory into the rice cooker. And install the porridge pot into the inner pot.

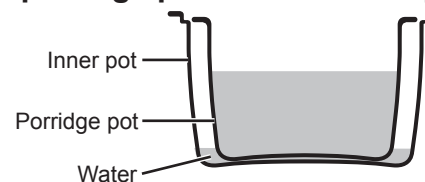

Note

- Two cups of water between inner and outer pot can be adjustable to your taste.
- Volume of water between inner and outer pot will be also adjustable to grade of rice and water temperature.
- If you prefer more soft porridge, add more water between inner and outer pot and cook again.

5 Place the inner pot in the rice cooker.

Make sure that the pan has direct contact with the heating plate by turning it slightly from right to left until it sits properly.

6 Install the inner lid to the outer lid by pressing the inner lid over the inner lid shaft.

7 Close the outer lid.

To close the outer lid, simply lower it until the lid latch engages with the lid catch with click.

8 Connect the power plug to an outlet.

9 Press the switch button.

Press the switch button on and a click will be heard.

The start lamp will turn on indicating the rice is starting to cook.

10 When the porridge has finished cooking, the switch button will pop up and a click will be heard.

At the same time the start lamp will go out and keep warm lamp will go on, which means the keep warm feature is working.

Note

- Remove and empty dew collector after every use.
- During keeping porridge warm for a long time, porridge may become sticky.
- Please note that the steam vent on top of the outer lid is very hot and steam will come out during cooking.
- During porridge cooking, pop-up a little steam (dew) from steam vent, if dew does spill out, open the outer lid immediately and continue cooking.

Porridge cooking capacity

Cooking capacity : 0.09 - 0.36

Using 180 ml measuring cup : 0.5 - 2 cup

 
5 How to USE (Steaming)

This function is only available for the JNP-1803.

1 Put 3 cups water with the measuring cup accessory in to the rice cooker.

- The amount of water varies according to the food and quantity.

2 Install the steaming plate into the inner pot and place foods on the plate.

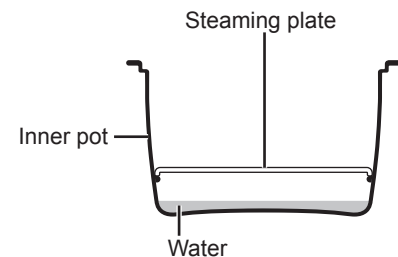

3 Place the inner pot in the rice cooker.

Make sure that the pot has direct contact with the heater plate by turning it slightly from right to left until it sits properly.

4 Install the inner lid to the outer lid by pressing the inner lid over the inner lid shaft.

5 Close the outer lid.

To close the outer lid, simply lower it until the lid latch engages with the lid catch with click.

6 Connect the power plug to an outlet.

7 Press the switch button.

Press the switch button on and a click will be heard.

The start lamp will turn on and steaming will start.

6 For Keeping Cooked Rice Warm And Tasty

■ Wash the rice quickly.

Stir the rice around with your hand in a generous amount of water, pour out the water, and repeat until the water remains clear.

■ Close the lid securely.

- If the lid is not closed securely, it may result in dryness, discoloration, and unusual odors of the rice.
- Be sure to remove any grains of rice that adhere to the brim of the inner pot.

■ Connect the power plug to an outlet immediately if it is disconnected.

- Failure to do so may lower the temperature of the rice and result in unusual odors and discoloration of the rice.

■ Do not use the Keep Warm function under the following conditions:

Avoid the following, as they may result in unusual odors, dryness, discoloration, and spoiling of the rice, or corrosion of the inner pot.

- Using the Keep Warm function with cold rice
- Adding cold rice to rice that is being kept warm
- Leaving a spatula in the inner pot while the Keep Warm function is on
- Using the Keep Warm function with the power plug disconnected
- Using the Keep Warm function for longer than 12 hours
- Keeping less than the minimum required amount of rice warm
Minimum required amount of rice
JNP-1000 : 1 cup
JNP-1800/1803 : 3cups
- Using the Keep Warm function for anything other than white rice (including rinse-free rice)
- Keeping warm a lump of rice with a hole in the middle.

■ Amount of rice to be “kept warm”

Be sure that the amount of rice to be kept warm is not too small.

If the amount of rice to be kept warm is too small, it will gradually dry and the taste will be affected. It is then advisable to serve it as soon as possible.

■ Inner Lid and Pot

Be careful not to deform them: avoid rough handling. Deforming of the lid and pot will adversely affect the cooking and keep warm performance of the cooker.

 
7 Cleaning and Maintenance

How to remove the dew collector

Each time after using the cooker, the dew collector should be removed, emptied and washed clean.

■ To remove it:


- 1 Grasp the dew collector and pull it in the arrow direction.

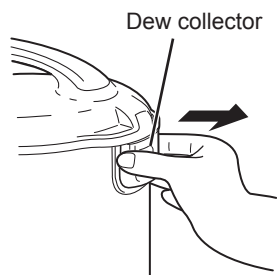

How to install spatula

Place the spatula holder in the right position hooking it to the lid catch.

 - Be sure to keep the spatula holder clean.

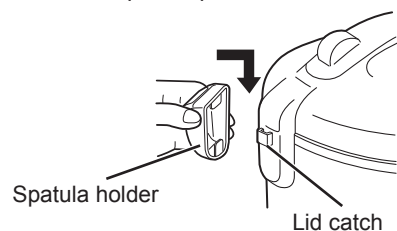

How to remove the steam vent

 
Each time after using the cooker, the steam vent should be removed and washed clean.

■ To remove it:

- 1 Slide the steam vent in the direction indicated by the arrow.



- 2 Take the steam vent up to the upright position.

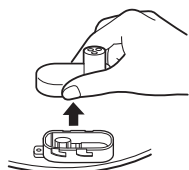

Make sure to install the steam vent after cleaning.

How to clean

Any other servicing should be performed by an authorized service representative.

Perform cleaning and maintenance procedures as described on the following p.15, 16.

Clean all parts by hand. Do not use a dishwasher/dryer.

To maintain cleanliness, always clean the rice cooker on the same day it is used. Also clean the rice cooker at regular intervals as well.

The rice cooker should also be cleaned on the day that it is used in order to remove any odors that remain from cooking.

Note

- Be sure to disconnect the power plug and allow the rice cooker, inner pot, inner lid, and steam cap to cool down before cleaning.
- Clean with a soft sponge and cloth.
- When cleaning the rice cooker with a detergent, use only standard kitchen detergent (for tableware and kitchen utensils).
- Rinse the parts thoroughly since detergent constituents remaining on them may result in deterioration and discoloration of part's materials such as resin.

■ Body

Wet a towel or cloth, wring out excess water, and wipe.

Note

- Do not allow water to get inside the rice cooker unit.
- Do not immerse the power cord in or splash it with water. Doing so may result in short-circuiting or electric shock.

■ Inner pot, Inner lid

Wet a towel or cloth, wring out excess water, and wipe.

- Do not wash dishes, etc., inside the inner pot.

■ Dew collector·Spatula

Clean with a soft sponge and with tap or lukewarm water. Wipe off water with a dry cloth and completely dry all parts.

■ Heater plate

 
 
Remove any adhering grains of rice, etc.

If adhering objects are hard to remove, use commercially available sandpaper (around #320), then wet a towel or cloth, wring out excess water, and wipe.

■ Removing odors

The following procedure should be performed each time after cooking.

- 1 Fill the inner pot to about 70 to 80% with hot water, keep warm for 2 to 3 hours.
- 2 Wash the inner pot and the inner lid with a standard kitchen detergent, and then rinse sufficiently with water.
- 3 Allow the rice cooker and all parts to dry in a well-ventilated location.

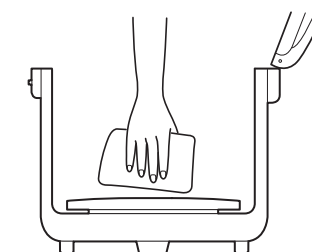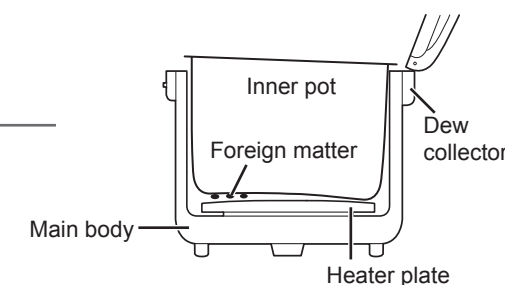

■ Inner pot with Teflon lining (to avoid damaging the Teflon lining)

- Be sure to use the spatula included when serving the rice.
- Do not use a metal spatula and spoon. Do not place spoons, forks, or bowls inside the inner pot.
- Do not use harsh or abrasive cleaners when washing the inner pot. Use a sponge or soft cloth.
- Over time the Teflon lining of the inner pot may become discolored or the color may become uneven.
- This is due to the effect of water and steam. It is not a problem, as it does not affect the functionality of the lining or the safety of food.

Specifications

Model		JNP-1000	JNP-1800	JNP-1803
Rating		220V 50/60Hz		
Rated power (W)		518	667	667
Cooking capacity (L)		0.18 to 1.0 (1 to 5.5 cups)	0.54 to 1.8 (3 to 10 cups)	0.54 to 1.8 (3 to 10 cups)
Outside dimensions (cm)	Width	27.3	29.9	29.9
	Depth	25.6	27.9	27.9
	Height	26.2	29.7	29.7
Weight		2.9 kg	3.7 kg	3.7 kg

Note

- One cup of white rice is about 150 g.

目錄

1	安全須知.....	18
2	各部名稱及用途.....	22
3	煮飯方法.....	23
4	使用方法 (煮粥).....	25
5	使用方法 (蒸).....	26
6	保溫.....	27
7	清潔保養方法.....	28
	規格.....	30

1 安全須知

使用前請仔細閱讀並遵守。

- 此處所顯示的注意事項旨在防止對使用者或他人造成人身傷害或財產損害。屬於有關安全方面的重要內容，請務必遵守。
- 請勿撕下產品上所黏貼有關注意事項的貼紙。

透過以下內容，將因疏忽注意事項而錯誤操作，導致危害及損害的程度，加以區分說明。



警告

表示假設操作不當時，可能導致使用者死亡或重傷^{*1}的內容。



注意

表示假設操作不當時，可能會造成使用者受到傷害^{*2}，或者出現財物損害^{*3}的內容。

*1 所謂重傷是指由於失明、受傷、燙傷（高溫、低溫）、觸電、骨折、中毒等留下後遺症，以及需要住院治療甚至長期複診的情況。

*2 所謂傷害是指不需要入院治療或長期複診的燙傷或觸電等情況。

*3 所謂物質損害是指波及到建築物、家產以及家畜、寵物等的連帶損害。

所用圖形符號的說明



△符號表示警告、注意。具體注意內容會在圖形符號裡或者旁邊以圖片或文字表示。



⊘符號表示該行為屬於禁止行為。具體禁止內容會在圖形符號裡或者旁邊以圖片或文字表示。



●符號表示強制行為或指示行為的內容。具體指示內容會在圖形符號裡或者旁邊以圖片或文字表示。



警告

一般安全注意事項



禁止分解

不可改造。請勿讓非本公司專業維修技術人員，對本產品進行分解或維修。可能會導致火災、觸電或受傷。



發生異常或故障時，請立即停止使用。如果繼續使用，可能會導致火災、觸電或人身傷害。

異常、故障範例

- 使用過程中，電源線或電源線插頭異常發熱。
- 電子鍋冒煙或出現焦味。
- 電子鍋的某個部位出現破裂、鬆動或晃動。
- 內鍋變形。
- 出現其他異常或故障。

立即拔下電源線插頭，並洽詢原購買處進行檢查、維修。

使用環境



請勿在承重強度不足的邊桌（滑動式桌子）使用本產品。以免產品掉落造成受傷、燙傷或故障。使用前請確認承重強度足夠。

致使用本產品的用戶



請勿讓身障人士或無法充分理解使用方法者單獨使用本產品。使用時必須要有可充分理解使用方法者在一旁確認後陪同使用。可能會導致燙傷、觸電或受傷。



請勿讓兒童單獨使用本產品，也不要讓幼兒可觸摸範圍內使用。可能導致燙傷、觸電或受傷。



警告

本產品的用途



請勿將產品用於使用說明書未記載的其他用途。

如果有蒸氣或米飯、食材噴出，則可能會導致燙傷或受傷。

〈禁止進行的烹調範例〉

- 將食材或調味料放入塑膠袋中進行加熱的烹調方法。
- 將烹飪紙取代鍋蓋使用的烹調方法。

電源



請勿使用額定電壓以外的電源。可能會導致火災、觸電或故障。



請單獨使用額定 7A 以上的插座。

如果與其他器具並用，多孔插座可能出現異常發熱、燒熔等現象，可能會導致火災。

電源線、電源線插頭



電源線如果出現破損，請勿繼續使用。此外，請勿破壞電源線。

（加工、過度彎曲、靠近高溫處、拉扯、扭動、捆束、重壓、夾入物體等）可能會導致火災或觸電。



電源線插頭如積塵過多，請仔細清除乾淨。可能會導致火災。



使用時請將電源線插頭完全緊密插入插座，不可有鬆動情況。

可能會導致插頭、插座燒熔、觸電、短路、冒煙或火災。



電源線或電源線插頭受損，或電源插座鬆動時，請勿繼續使用。

可能會導致觸電或短路、燒熔、火災。



若電源線損壞時，必須由製造廠商或其服務處或具有相關資格的人員加以更換以避免危險。



請勿用濕手觸碰本產品。

請勿在手潮濕的情況下插拔電源線插頭。可能會導致觸電或受傷。



電源線插頭請勿接觸到蒸氣。

可能會導致火災、觸電或著火。在移動式桌子上使用時，電源線插頭請勿在蒸氣影響範圍內使用。

操作本產品時



嚴禁將本產品浸入水或其他液體中。

請勿用水浸泡或淋濕本產品。

否則可能導致短路或觸電。



請勿在吸、排氣孔或空隙間插入異物，例如別針、鐵絲等金屬物體。

否則可能導致觸電或異常情況對人身產生傷害。

烹調中、烹調後



煮飯過程中，請勿打開鍋蓋。

否則可能會導致燙傷。



請勿觸摸或接觸

請勿將臉或手靠近蒸氣孔蓋或蒸氣孔。

否則可能會導致燙傷。特別是注意不要讓嬰幼兒碰觸。

⚠ 注意

一般安全注意事項



請小心操作。

如果掉落或強大撞擊，可能導致傷害或故障。



本商品為一般家庭用。

本產品預想的使用場所為家庭內或以下場所，請注意。

- 店鋪、事務所等的茶水間
- 農場設施
- 賓館等住宿設施的客房
- 民宿等住宿設施的客房

使用環境



請勿在不穩定場所、耐熱性差的桌子、墊子或地毯上面使用。

可能導致火災，或傷到桌子、墊子或地毯。



請勿在靠近牆壁或家具的位置使用。

蒸氣或者熱度可能會造成損傷、變色或變形，因此請離牆壁或家具 30cm 以上。



請勿在蒸氣不易散發，可能接觸到控制面板的狹小空間中使用本產品。

以免因蒸氣熱度，而導致控制面板變形或本產品損傷、變色、變形、故障。在移動式桌子上使用時，請將桌子完全拉出，避免產品接觸到蒸氣。



請勿在 IH 調理器的上方使用本產品。

 
可能會導致產品故障。

電源線、電源線插頭



取下電源線時請務必握緊插頭。

否則可能導致觸電或短路，從而導致火災。

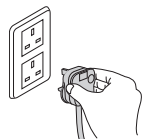

禁止同時使用多孔插座。

可能導致火災。



操作本產品時



請勿使用非專用內鍋。

可能導致過熱或異常情況。



請勿空燒。

可能導致故障、過熱或異常情況。



打開鍋蓋時請注意蒸氣。

可能導致燙傷。



不使用時，請將電源線插頭從插座上拔下。

防止由於短路而造成人身傷害，或因電源線材劣化，導致觸電、漏電或火災。



搬運本產品時，請勿觸摸開蓋按鈕。

否則鍋蓋打開，可能會導致受傷或燙傷。

請勿觸摸或接觸

烹調中、烹調後



使用時或使用後請勿觸碰高溫表面。

可能導致燙傷。

請勿觸摸或接觸



請勿在煮飯過程中移動電子鍋。

可能導致燙傷或米湯溢出。

清潔保養時



待本產品冷卻之後再進行清潔保養，高溫表面可能導致燙傷。

觸摸高溫部位會造成燙傷。



請勿將本產品整機清洗。

 
以免本產品或底部浸水，可能導致短路和觸電。

■ 今後使用時的注意事項

- 請清除本產品上所附著之燒焦飯粒、米粒等。可能導致蒸氣外洩、米湯溢出或發生故障、或不美味等。
- 煮飯過程中，請勿用布等覆蓋電子鍋。否則可能導致本體或鍋蓋出現變形或變色。
- 為了維持本產品的功能與性能，產品中設有專用孔洞，但偶爾會有昆蟲等進入該孔洞內，使產品發生故障。請注意可以使用市面上銷售的防蟲產品。另外，如果爬入了蟲子造成了產品故障，需自費維修。具體詳情請至原購買處洽詢。
- 內鍋屬於消耗品，其氟素塗層隨著使用會逐漸損耗，有時會出現剝落，不過其對人體無害，也不會影響煮飯或保溫性能。如果您介意出現以上情況或者出現了變形、腐蝕時，您可以重新購買。具體詳情請至原購買處洽詢。

- 內鍋的氟素塗層出現膨脹或剝落會導致變形，因此請務必遵守下列使用方法。
 - 請勿將內鍋直接放置於瓦斯爐上加熱，或在電磁爐、微波爐等器具中使用。
 - 請勿將白米以外的米飯（什錦飯等）進行保溫。
 - 請勿在內鍋中使用醋。
 - 請勿使用隨附或木製品以外的飯匙。
 - 請勿使用金屬製的勺子、湯匙、打蛋器等堅硬物體。
 - 請勿在內鍋中放入蒸籠、蒸架等…非標準配件物品。
 - 請勿在內鍋中放入餐具等堅硬物體。請勿使用金屬鏟或菜瓜布等堅硬物體進行清潔保養。
 - 請勿使用金屬鏟或菜瓜布等堅硬物體進行清潔保養。
 - 請勿放入洗碗機或烘碗機等產品清洗。
 - 應使用另外的盆洗米。使用內鍋洗米會損壞氟素塗層或造成鍋底變形，導致無法將飯煮好。
 - 內鍋變形或損傷時，請至原購買處洽詢。

2 各部名稱及用途

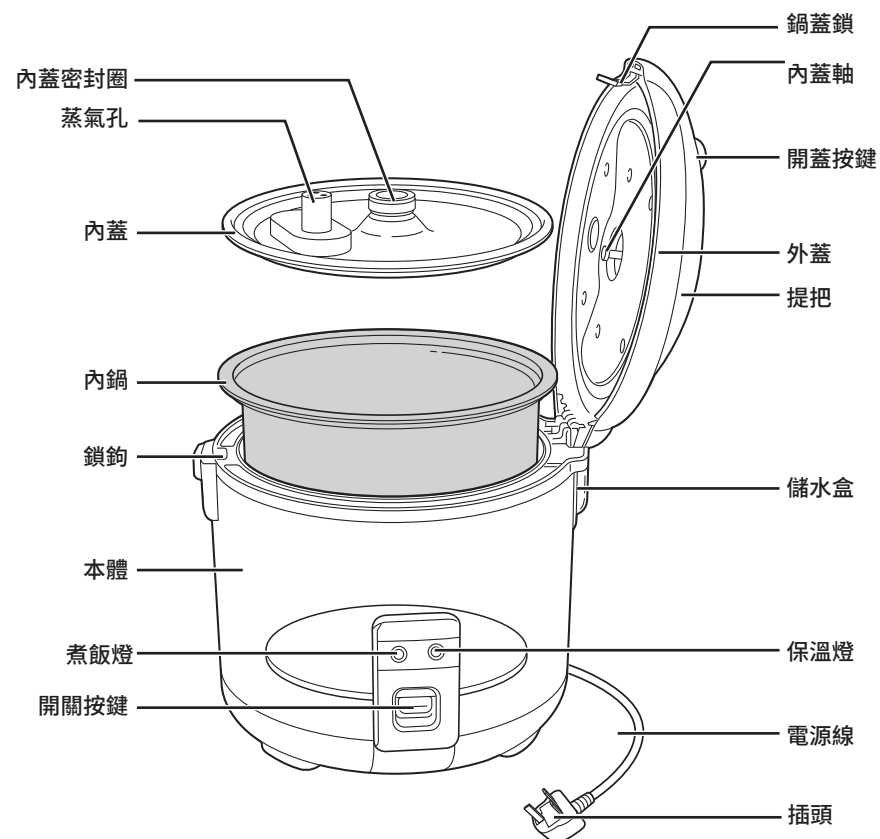

■ 確認配件

量杯
約 1 杯 (大約 0.18L)、
約 150g



飯匙

 


飯匙架



僅 JNP-1803 型號附帶

蒸盤



勺子



煮粥鍋



3 煮飯方法

 
1 量米

請務必用隨附的量杯測量。
隨附的量杯平口盛滿一杯約為 0.18L。




- 如下圖所示，以量米杯 (0.18L) 平口呈滿 1 杯為標準進行量米。

正確的測量範例



錯誤的測量範例

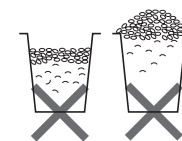 

2 洗米



 
Note

- 應使用另外的盆洗米。使用內鍋洗米會損壞氟素塗層或造成鍋底變形，導致無法將飯煮好。

3 將米和水放入內鍋

請將內鍋水平放置，對照內鍋內側的水量刻度加減水量。

煮 3 杯白米時，要
對準水量刻度 3 位
置

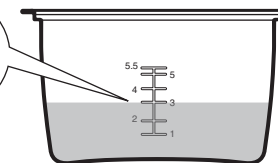


Note

- 水量不適當可造成米飯溢出或導致無法將飯煮好。

4 將內鍋放置在主體中

 將內鍋從右向左略作轉動並安放妥當。

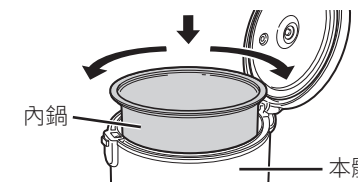


⚠ 注意

- 如果內鍋的外表面被濺濕，煮飯時便會發出劈啪聲。外表面上的水分還可能導致損壞。請務必在使用前將水分擦乾。

5 沿內蓋軸按壓內蓋，將其安裝至外蓋

 安裝內蓋後，當打開外蓋時，內蓋密封圈較窄的一側應朝向您。

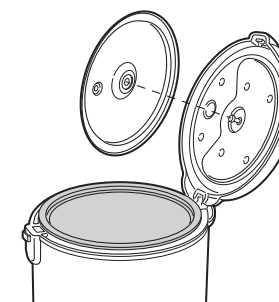


Note

- 如果內蓋安裝不當，將無法蓋上外蓋。

6 關閉鍋蓋

 
蓋上外蓋時，僅需將外蓋慢慢放下，使鍋蓋鎖與鎖鉤咬合在一起並發出“喀嚓”聲音。

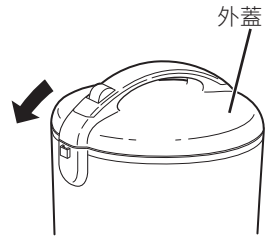

Note

- 如果未蓋好外蓋，會影響煮飯效率。

 7 將電源線插頭插入插座

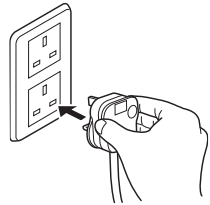


Note

- 在真正開始煮飯之前，請勿插接電源線。一經插上電源線，即便未將開關置於煮飯模式，加熱電路也開始工作。
- 不使用時，請將電源線插頭從插座上拔下。


8 按下開關按鈕

 按下開關按鈕時會發出“喀嚓”聲音。煮飯燈亮起，表示開始煮飯。

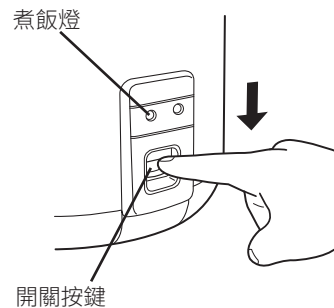

9 燜飯 15～20 分鐘

 
當開關按鈕跳起並啟動保溫功能時，便進入燜飯過程。因此，在大約 15 分鐘內請勿打開鍋蓋。



Note

- 保溫功能啟動後，請勿再次將開關按鈕置於煮飯模式。

 10 開始燜飯時，會顯示剩餘時間

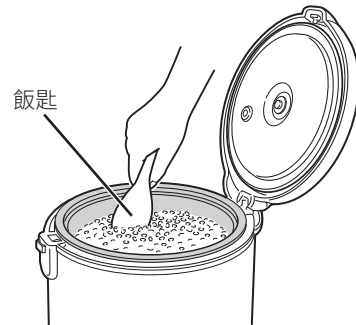

Note

 
- 不要忘記用飯匙將米飯攪拌均勻。

11 繼續保溫

Note

- 在此過程中，小心不要讓米飯掉在內鍋邊緣上。否則可導致鍋蓋無法蓋緊，造成保溫失效。

12 從插座上拔下電源線插頭

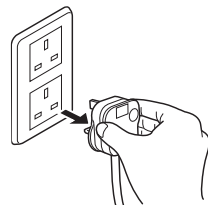

該功能僅 JNP-1803 可使用。

 
1 量米

請務必用隨附的量杯測量。


2 洗米



3 請根據您的口味，將米與適量的水放入煮粥鍋

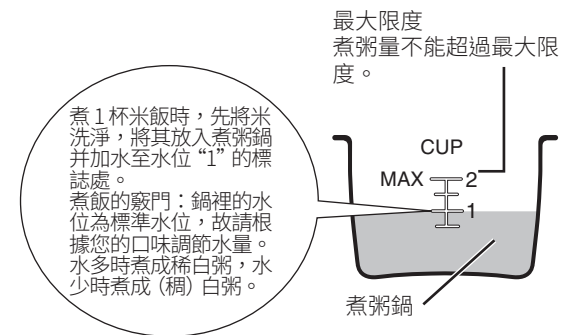

4 用附帶的量杯量取 2 杯水放入內鍋，然後將煮粥鍋放進內鍋

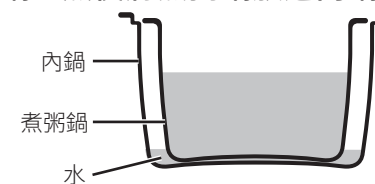 

Note

- 內鍋與煮粥鍋間加入的水量以 2 杯為參考標準。
- 依水溫及米的種類不同，煮好的粥的狀態亦會有所不同。您可根據自己的喜好適當調節內鍋與煮粥鍋間的水量。
- 當煮好的粥較硬時，可往內鍋與煮粥鍋間添加水，然後按下煮飯開關。

5 將內鍋放置在主體中

將內鍋左右略作轉動并放置好，并請確認內鍋與散熱板接觸良好。

6 沿內蓋軸按壓內蓋，將其安裝至外蓋

7 關閉鍋蓋

蓋上外蓋時，僅需將外蓋慢慢放下，使鍋蓋鎖與鎖鉤咬合在一起並發出“喀嚓”聲音。

8 將電源線插頭插入插座

9 按下開關按鈕

按下開關按鈕時會發出“喀嚓”聲音。煮飯燈亮起，表示開始煮飯。

10 煮粥完畢時，開關會自動跳起，且可聽到咔嚓的聲音

同時，煮飯指示燈會熄滅，保溫指示燈點亮，表示本機處於保溫中。

Note

- 每次使用之後，水滴收集器必須取下并倒空裡面的水。
- 煮粥時，如長時間使用保溫功能，粥可能會變得很稠。
- 煮粥時，鍋蓋頂部的蒸氣孔處會很熱，並會有蒸氣由此孔噴出，請務必注意。
- 煮粥時，可能會從蒸氣孔放出少許蒸氣（蒸氣水），若確有蒸氣水流出，則請立刻打開鍋蓋繼續煮粥。

煮粥容量

 
容量：0.09L - 0.36L
使用 180 ml 量杯：0.5 - 2 杯

5 使用方法 (蒸)

該功能僅 JNP-1803 可使用。

- 1 用量杯量取 3 杯水放入內鍋**
• 水量可根據所蒸煮食物及量調節。

- 2 將蒸盤放進內鍋，然後放上待蒸煮食物**

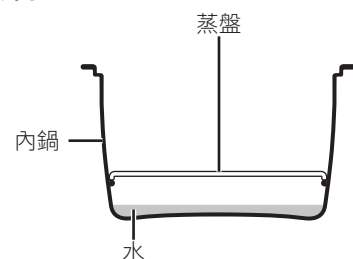

- 3 將內鍋放置在主體中**
將內鍋左右略作轉動并放置好，并請確認內鍋與散熱板接觸良好。

- 4 沿內蓋軸按壓內蓋，將其安裝至外蓋**

- 5 關閉鍋蓋**
蓋上外蓋時，僅需將外蓋慢慢放下，使鍋蓋鎖與鎖鉤咬合在一起並發出“喀嚓”聲音。

- 6 將電源線插頭插入插座**

- 7 按下開關按鍵**
按下開關按鍵時會發出“喀嚓”聲音。煮飯燈亮起，表示開始煮飯。

6 保溫

■ 迅速洗米

用足夠的水快速攪動洗米，直至水變得清澈。

■ 蓋緊鍋蓋

- 如果不蓋緊，可導致米飯出現異味、變乾和變色等情況。
- 內鍋的邊緣如果沾有飯粒等，請擦拭乾淨。

■ 將電源線插頭插入插座

- 以免造成米飯溫度降低，由此導致米飯出現異味和變色等情況。

■ 請勿在以下情況下使用保溫功能：

請勿進行如下形式的保溫，以免造成米飯出現異味、變乾、變色、變質或內鍋腐蝕等。

- 保溫冷飯
- 添加冷飯
- 放入飯匙一起保溫
- 拔掉電源線插頭保溫
- 保溫 12 小時以上
- 少於最小炊煮量的保溫
最小煮飯量
JNP-1000 : 1 杯
JNP-1800/1803 : 3 杯
- 白米（免洗米）以外的保溫
- 為中間有孔的小飯團保溫

■ 保溫米飯時，請確認飯量合適

使用保溫功能，米飯會逐漸變得乾燥，影響口味。因此，建議儘早食用。

■ 內蓋和內鍋

請注意防止變形。若內蓋和內鍋變形，會影響煮飯和保溫功能。

 
7 清潔保養方法

儲水盒的拆卸方法

每次使用電子鍋後，應取下儲水盒，清空水分並清洗乾淨。

■ 拆卸方法：


1 握住儲水盒，沿箭號方向上拉

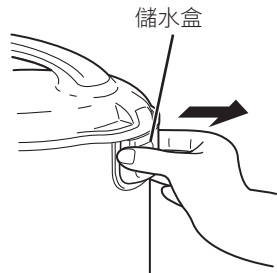

飯匙的放置方法

將飯匙架安裝就位並勾在鍋蓋的鎖鉤之上。

 - 務必保持飯匙架清潔。

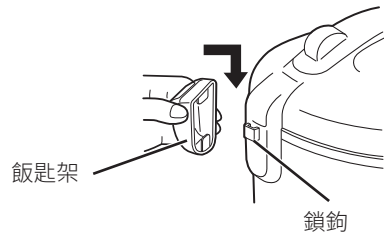

蒸氣孔的拆卸方法

 
每次使用電子鍋後，應取下蒸氣孔並清洗乾淨。

■ 拆卸方法：

1 沿箭號所示方向滑動蒸氣孔



2 上提蒸氣孔並使其立起

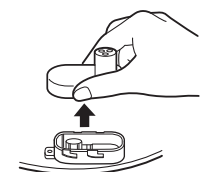

清洗乾淨後，務必將蒸氣孔重新安裝就位。

清潔保養方法

其他的保養服務請經認可的保養服務負責人員進行操作。

清潔保養的方法，請參照 P.29，30 所記載的方法進行。

所有的部件請用手洗。請勿使用洗碗機。

使用後，為了保持鍋體乾淨，請務必在當天進行清潔保養。此外，還要定期進行清潔保養。

使用當天，為了去除煮飯所帶來的異味，也應對電子鍋進行清潔。

Note

- 請務必拔掉電源線插頭，等待主體、內鍋、內蓋、蒸氣孔蓋冷卻後再進行清潔保養。
- 請使用海綿或布等柔軟的工具。
- 使用清潔劑進行清潔保養時，要使用廚房專用清潔劑（餐具用、廚具用）。
- 如果殘留清潔劑成分的話，會造成樹脂劣化、變色。請確實將清潔劑沖洗乾淨。

■ 本體

請用擰乾水的布擦拭。

Note

- 主機內部嚴禁進水。
- 請勿將電源線浸入水中或沾上水。以免導致短路、觸電及故障。

■ 內鍋、內蓋

請用擰乾水的布擦拭。

- 請勿將餐具類放入內鍋中，及把內鍋當做洗碗池使用。

■ 儲水盒・飯匙

用海綿沾水或溫水進行清洗。用乾布擦拭乾淨水分，並充分乾燥。

■ 散熱板

當沾有燒焦的飯粒、米粒等時，請擦拭乾淨。

無法順利清除時，可使用市面上銷售的砂紙（320 號左右）擦拭，再用擰乾水的布擦拭。

 
 
■ 異味的去除方法

每次煮飯後，請使用以下方法去除異味。

1 熱水加入內鍋至 7～8 分，然後保溫 2～3 小時

2 使用廚房專用清潔劑清洗內鍋、內蓋、蒸氣孔蓋之後，充分沖洗乾淨

3 在通風良好的地方晾乾主體與各零部件

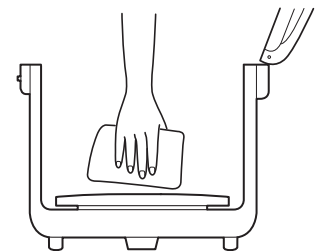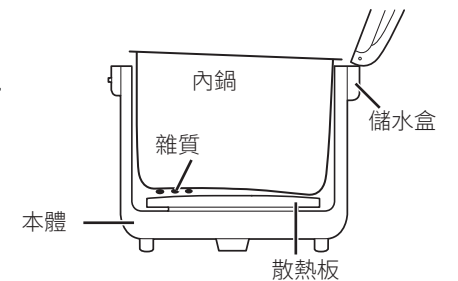

■ 氟素樹脂塗層內鍋（為防止損傷氟素樹脂塗層）

- 盛裝米飯時請務必使用附帶的飯匙。
- 請勿使用金屬制的飯匙、勺子、鏟子。請勿將勺子、叉子、茶杯等放入內鍋中。
- 清洗內鍋時，請勿使用研磨劑、質地粗糙的清潔乳。請使用海綿或柔軟的布清洗。
- 使用一段時間後，內鍋的氟素樹脂塗層可能出現部分變色、顏色不均的情況。
這是水或蒸氣導致的，與加工性能或食品衛生無關，不會產生影響。

規格

型號		JNP-1000	JNP-1800	JNP-1803
電源		220V 50/60Hz		
額定功率 (W)		518	667	667
額定容量 (L)		0.18 ~ 1.0 (1 ~ 5.5 杯)	0.54 ~ 1.8 (3 ~ 10 杯)	0.54 ~ 1.8 (3 ~ 10 杯)
外形尺寸 (cm)	寬度	27.3	29.9	29.9
	深度	25.6	27.9	27.9
	高度	26.2	29.7	29.7
重量		2.9 kg	3.7 kg	3.7 kg

Note

- 1 杯 = 約 150g。



TIGER CORPORATION

Head Office: 3-1 Hayami-cho, Kadoma City, Osaka 571-8571, Japan