

# How to Clean

- ◆ Clean after every use.
- ◆ Use mild kitchen detergent (for plates and cooking utensils).
- ◆ Use a sponge or soft cloth.

**Note:** Store the lunch box in a well-ventilated place.  
Keep it dry and clean when not using.

- Side dish container** 1. Wash in warm water with a sponge and soap, and rinse.  
**Side dish container lid** (Do not expose the side dish container and lid to water exceeding 70°C (157°F) in temperature. Do not scrub the gasket valve harshly.)  
**Rice container**  
**Rice container lid**  
**Soup container**  
**Soup container lid**  
**Gasket**  
**Outer lid**  
**Chopsticks and case** 2. Wipe off water with a dry cloth and allow each piece to dry thoroughly.

- Outer container** 1. Wipe with a cloth dampened with warm, soapy water. (Do not immerse the outer container in water.)  
 2. Wipe off any excess soap with a dry cloth and allow the container to dry thoroughly.

**Chopstick holder** Wipe with a cloth dampened with warm water. (Do not immerse the chopstick holder in water.)

**Carrying bag** Wipe with a cloth dampened with warm water. (Do not immerse the Carrying bag in water.)

### About the Artificial Leather

When cleaning simple dirt on the artificial leather portion of the Carrying bag, wipe with a dry cloth. When cleaning finger marks, grime, and persistent dirt, wipe with a cloth dampened with a neutral detergent (1 to 2 drops per cup of water).

**Note:** When using detergent, test for color fast on a small, inconspicuous area first.

\* As artificial leather readily stains other materials, do not store in close contact with plastic and leather products.

\* Store the Carrying bag in a well-ventilated place.

### Caution

- Do not use harsh / abrasive materials such as thinner, bleach, chemical cleaners, steel wool, and other hard brushes.
- Do not use dishwashers / dishdryers or boiling water.
- Always attach the soup container lid's gasket and gasket valve. → See below.
- Wash and dry each part thoroughly before storing for long periods without use.

### Attaching and Removing the Gasket (soup container only)

 
 
#### To Remove

Fit the end of a soft pointed rod (toothpick, etc.) into the groove and pull out the gasket. (Do not use metal skewers, etc.)

Soup container lid (Underside)


#### To Attach

Press securely into the groove.

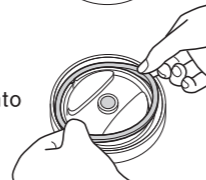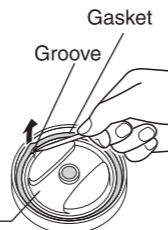

### Attaching the Gasket Valve (soup container only)

 If the gasket valve comes off, reattach it.

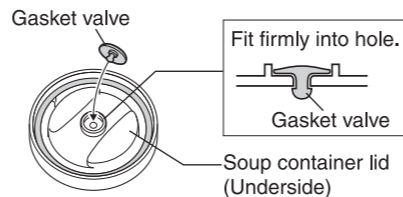

### Cleaning Rust-like Spots on the Inside of the Outer Container

- Dilute 1 tablespoon (approx. 10g) of citric acid in warm water and pour into the outer container.
- Let it soak for 2 to 3 hours, and then clean with a sponge and rinse abundantly with the water.
- Wipe the inside of the container with a dry cloth and allow to dry thoroughly.

#### As a substitute:

Use 1/2 cup of white vinegar instead of citric acid.

### Replacing and Purchasing Consumable Parts

The gasket and gasket valve are consumable parts. Check once a 6 months to 1 year for damage/deterioration. If heavily stained or loose, replace them. For replacements, contact the shop where you purchased.

#### Before contact customer service

Tiger Corporation manages product quality very carefully, however, should trouble occur with this product, contact the shop where you purchased, providing them with the following information.

1. Product name
2. Model Number
3. Description of trouble (As detailed as possible)

Feel free to send any questions or comments about this product to the shop where you purchased it.

## Specifications

Capacity	Rice container	0.61L
	Side dish container	0.3Lx2
	Soup container	0.27L
Temperature retention	Temperature retention without the bag	Greater than 70°C/157°F (6 hours)
	Temperature retention with the bag	Greater than 71°C/160°F (6 hours)
Outer measurements <sup>*1*2</sup>	Width 15.0 X Depth 14.7 X Height 25.6	
Capacity <sup>*1*3</sup>	1.4kg	

\*1 This is estimate numbers. \*2 Bag is not including with the numbers.

\*3 Bag is including with the numbers.

※ Heat retention has been calculated under the condition of adding hot water at 95°C±1°C · 203° F±2° F and leaving it in a room temperature of 20°C±2°C · 68° F±4° F for 6 hours.

## Materials

Outer container	Outer shell	Stainless steel (with acrylic coating)
	Lining	Stainless steel
Rice container, side dish container, soup container, and soup container lid	Polypropylene	
Rice container lid	Polypropylene (Inside: Polystyrene foam)	
Side dish container lid	Polyethylene	
Chopsticks	Methacrylate resin	
Chopstick case	ABS	
Gasket and gasket valve	Silicone	

## Heat / Cold Resistance

Rice container, side dish container, soup container, and soup container lid	140°C 283°F	-20°C -4°F
Rice container lid	90°C 193°F	-20°C -4°F
Side dish container lid	70°C 157°F	-20°C -4°F
Chopsticks and case	80°C 175°F	-20°C -4°F

\*The polypropylene resin from the containers is hygienically tested approved.

\*For the purpose of performance improvement, designs, specifications and parts shown in this publication are subject to change without notice.

\*BPA Free



MODEL

LWU-F

Household Use Only

# Stainless Steel Lunch Box

 
With carrying bag

## Instructions

Thank you for purchasing a "TIGER" Stainless Steel Lunch Box.

Please read the instructions completely before use.

Keep these instructions for future reference.

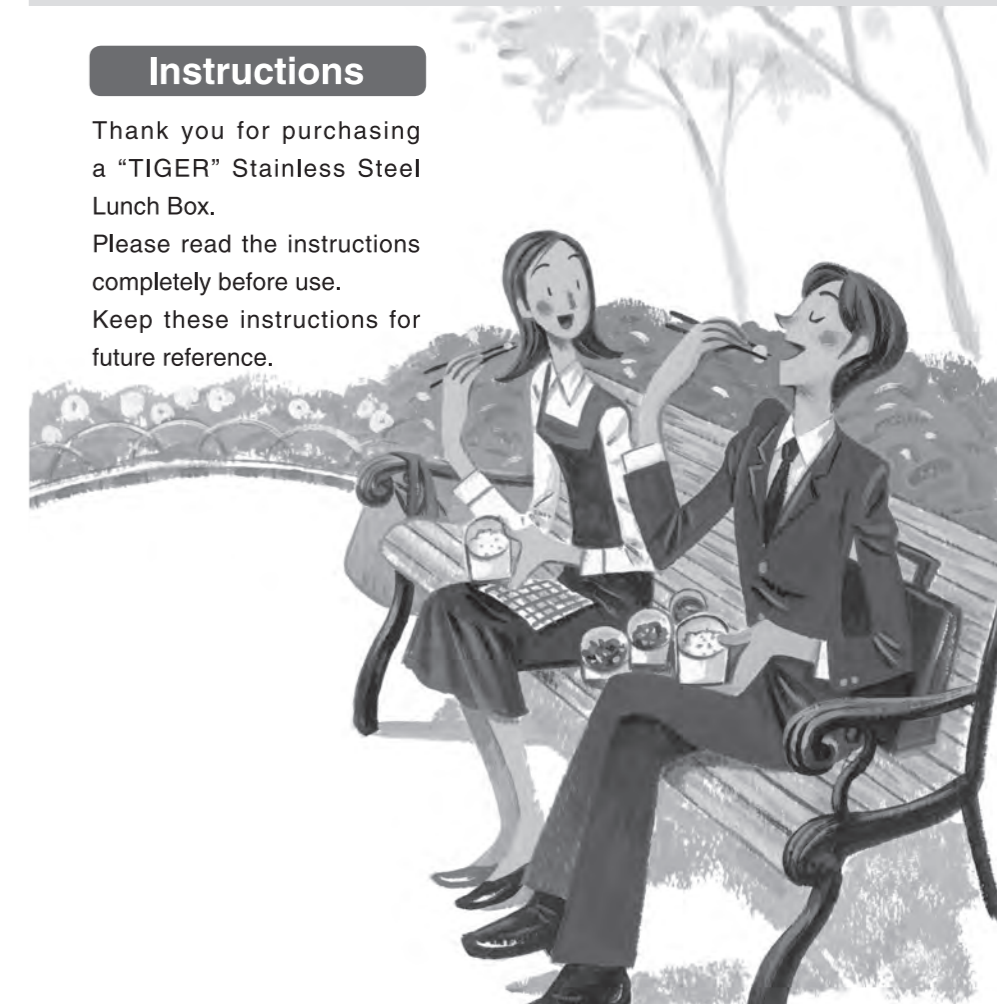

TIGER CORPORATION

Head Office: 3-1 Hayamicho, Kadoma-City, Osaka, 571-8571 Japan

URL: <http://www.tiger.jp/global.html>

# Safety Precautions

## Keep out of reach of children.

Collapsing of this product can burn or injure children.



## Do not carry the lunch box by holding the outer lid.

The outer lid can detach causing the lunch box to drop and possible injury.



## Keep away from stoves, heaters and flames.

Heat can burn, bend and discolor the product.

## Do not put raw meat / fish or dairy products in the inner containers.

Such foods spoil easily.

## Allow cooked foods to cool off before putting them in the side dish container.

Not doing so may cause the food to spoil.

## Do not add rice, cooked foods or soup directly to the outer container.

Doing so may cause burns or rusting.

## Do not use the lunch box for any purpose other than keeping food warm or cold.

## Do not store food and soup for more than 6 hours.

Prolonged storage may cause the food and soup to spoil.

## Do not set the lunch box on its side.

Doing so may cause contents to leak.



## Do not knock over, drop, or subject the lunch box to strong shocks.

Doing so may cause damaging the product, great loss of heat retention, burns, deformation, rust, and peeling of the coating, or leaking of contents.

## Do not swing the lunch box strap.

Doing so may cause injury or damage to people and objects.

## Do not wash the Carrying bag.

Washing the Carrying bag can reduce its water resistance and may cause it to wrinkle.

### Microwave Precautions

 
- Do not microwave the outer container.
- Do not microwave the inner containers with their lids on.
- Do not microwave the inner containers when they are empty.
- Do not microwave oily or sugary foods in the inner containers for long periods of time.
- Do not use the grill or oven mode of combination microwave ovens to heat the inner containers. (If other foods were heated using the grill or oven mode, allow the microwave to cool off before heating the inner containers.)

**Caution:** Improper use can result in injury by electric shock or malfunction, and deformation or damage to the inner containers.

# How to Use

## 1 Open the outer lid, and remove the inner containers.

Opening / Closing the Outer Lid

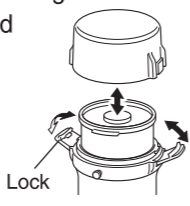


When Using for the First Time

Wash the inner containers and chopsticks. →P.4

### 【Names of Parts】

 Be sure all the parts and accessories are including with the package.

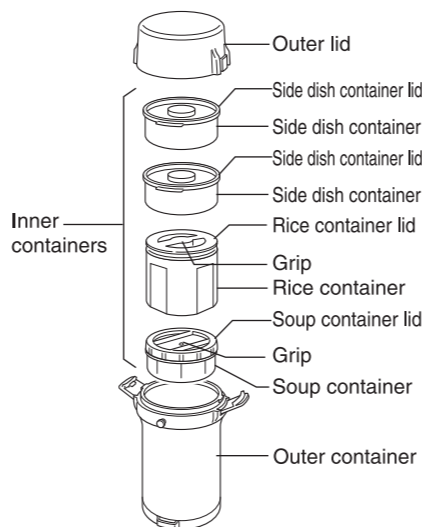


## 2 Pour hot water into the rice and soup containers, and let them sit for 1 to 2 min.

- Once the containers are warmed up, discard the water and wipe the containers dry with cloth.
- Do not warm up the side dish container.
- Be careful of burns.

**Warning:** Please do not warm the side dish container since its heat resistance is only 70°C (157°F).

## 3 Pour hot soup into the soup container.

 - To enhance the thermal effect of the lunch box, pour hot water when not storing soup.
- Other foods such as stew can be kept warm in the soup container.




Shut tight.

**Note:** The gasket and gasket valve must be set in a proper way before use to avoid leakage. (see figure P.4)

**Replacing Gaskets:** check the gasket and the gasket valve every 6 months to 1 year for wear / tear condition. If the gasket is too loose or heavily stained then it is time to replace, see back cover for replacement inquiry.

## 4 Put hot rice in the rice container.

 Do not add soup, rice with meat and vegetable into the rice container.

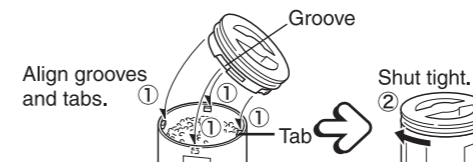


## 5 Put the side dish in the side dish container.

- Allow cooked foods to cool off before putting them into the container.
- Wrap strong smelling, vinegary, or oily foods and foods with coloring such as spinach and pickled radish in plastic wrap.



## 6 Set the inner containers in the outer container.

 - Hold the containers by their grips, and stack them gently in the outer container.
- Be sure to stack the inner containers in the order shown to the right.

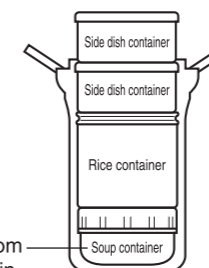

**Note:** Soup container must be sitting at the bottom of outer container every use. Inner containers must arrange as shown on the picture.


## 7 Attach the outer lid. (→P.2)
 
## 8

### When You Do Not Use the Carrying bag

Attach the chopstick holder to the outer container.

Attaching the Strap

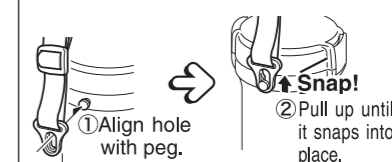


\*To detach the strap, reverse the steps.

### When You Use the Carrying bag

 
Attach the chopstick holder inside the Carrying bag.

Attaching the Strap

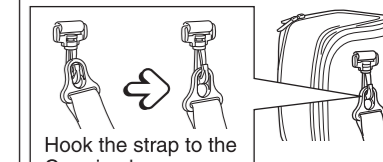

\*To detach the strap, reverse the step.

 
Chopstick holder

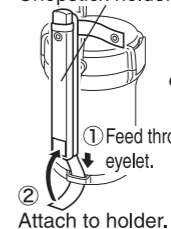

Feed through strap loop.



 Put the chopstick holder into place.

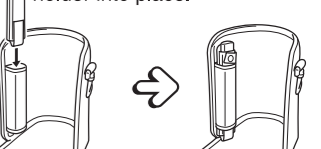

### Microwaving (Precautions→P.1)

Detach the lids from the inner containers before microwaving.